 


20T-1A0M-MM (9999 Minutes)

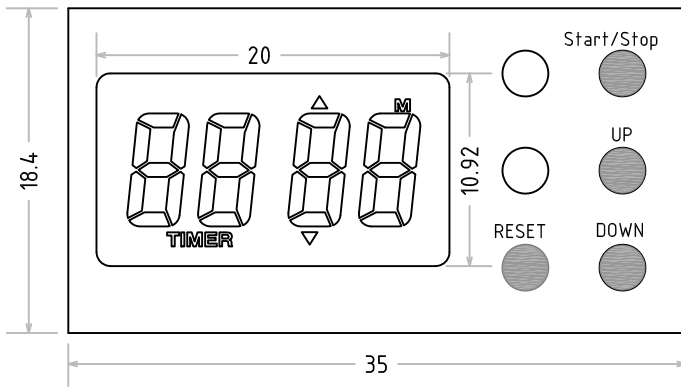

Main Features:

- Maximum Capacity: 9999 minutes for both countdown and count up
- Resolution: 1 second
- Minimum Setting Interval: 1 minute
- Count down and then count up
- Display format automatically change to appropriate format
- 4 keys operation
- Power source: 1 pc of LR44
- 1 minute alert normally, but PSA alert also available upon request
- Output pole is available upon request

 
A. Keys Definition:

- 1) Start/Stop - Press to start or stop count down or up.
- 2) UP - To adjust timer upward
- 3) DOWN - To adjust timer downward
- 4) RESET - To reset the reading

B. Key Operation:

- 1) When power on, LCD full displayed for 2 seconds, then display 0h.
- 2) Use "UP" or "DOWN" key to adjust timer.
- 3) Press "Start/Stop" to start count down or up.
- 4) Press "Start/Stop" key again to stop counting.
- 5) Press "RESET" key to reset the reading.

20T-1A0M-HH (9999 Hours)

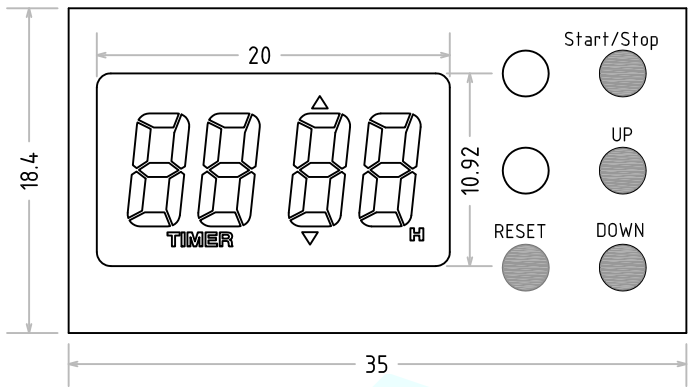

Main Features:

- Maximum Capacity: 9999 hours for both countdown and count up
- Resolution: 1 second
- Minimum Setting Interval: 1 hour
- Count down and then count up
- Display format automatically change to appropriate format
- 4 keys operation
- Power source: 1 pc of LR44
- 1 minute alert normally, but PSA alert available upon request
- Output pole is available upon request

 
A. Keys Definition:

- 1) Start/Stop - Press to start or stop count down or up.
- 2) UP - To adjust timer upward
- 3) DOWN - To adjust timer downward
- 4) RESET - To reset the reading

B. Key Operation:

- 1) When power on, LCD full displayed for 2 seconds, then display 0h.
- 2) Use "UP" or "DOWN" key to adjust timer.
- 3) Press "Start/Stop" to start count down or up.
- 4) Press "Start/Stop" key again to stop counting.
- 5) Press "RESET" key to reset the reading.

20T-1A0M-DD (9999 Days)

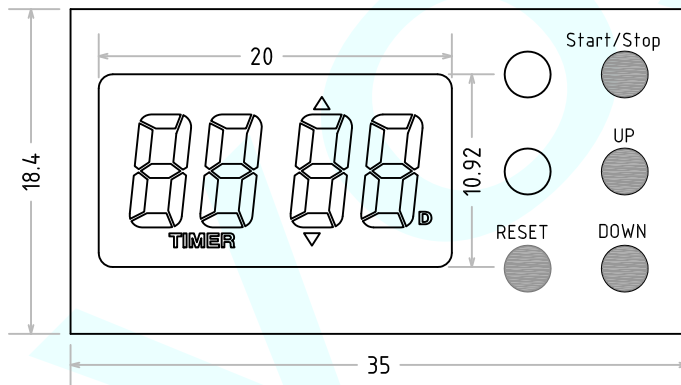

Main Features:

- Maximum Capacity: 9999 days for both countdown and count up
- Resolution: 1 second
- Minimum Setting Interval: 1 day
- Count down and then count up
- Display format automatically change to appropriate format
- 4 keys operation
- Power source: 1 pc of LR44
- 1 minute alert normally, but PSA alert available upon request
- Output pole is available upon request

A. Keys Definition:

- 1) Start/Stop - Press to start or stop count down or up.
- 2) UP - To adjust timer upward
- 3) DOWN - To adjust timer downward
- 4) RESET - To reset the reading

B. Key Operation:

- 1) When power on, LCD full displayed for 2 seconds, then display 0h.
- 2) Use "UP" or "DOWN" key to adjust timer.
- 3) Press "Start/Stop" to start count down or up.
- 4) Press "Start/Stop" key again to stop counting.
- 5) Press "RESET" key to reset the reading.

