

# INSTRUCTION MANUAL

## OF SPECIAL EVENT COUNTDOWN CALANDAR CLOCK - MC800

**Mounting the clock** - Remove the backing from one side of the supplied adhesive strip and press the strip on the clock. Remove the strip's other backing and press the clock firmly onto the desired surface.


S1: To enter Set Mode


S2: To select display mode or to adjust the reading upward.

S3: To adjust the reading downward, or to reset second in a moment.

**DISPLAY MODES, A, B, C, and D - Use S2 to select.**


A. Time  The colon flashing every second.

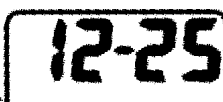B. Calendar  The dash bar displays steady.

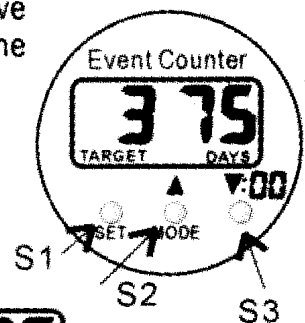


C. Target Day


Display Target Day, the date and the year you set for counting by turns automatically.

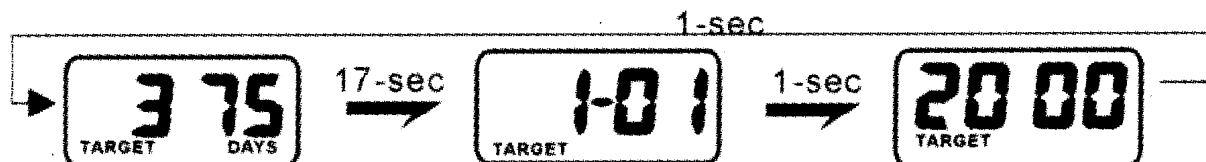


D. Display Current time, Calendar and Target Day by Turns automatically.

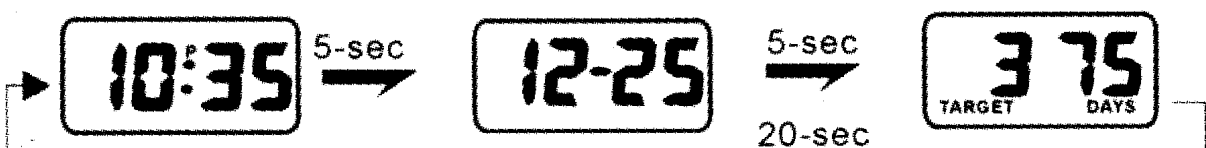

E. In order to provide you precise managing of your Target, from the 6th Day, the clock automatically change the display format from days to minutes.

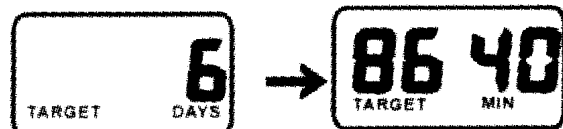

 F. In order to allow you precise managing of your Target, when the counting reaches to 150 minutes, the clock automatically change the display format from minutes to seconds.

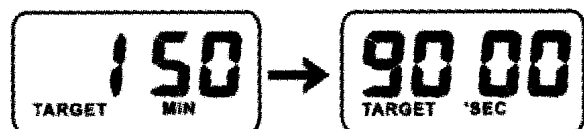

**TIME & CALENDAR SETTING** - At display mode A or B, each press of S1 will activate the setting of year, month, date, hour, and minute. Use S2 and S3 to adjust upward or downward. Finally the last (6th) press of S1 closes the setting and return to display mode A.

**ONE TOUCH RESET FOR SECOND** - At mode A, press S3 to reset the second to zero.

**TARGET DAY SETTING** - The default is **January 1, 2000**. Use S2 to select mode C, press S1 to activate the setting of year. Use S2 and S3 to set the year of your target day. Press S1 again to activate the setting of month. Use S2 and S3 again to set the month of your target. The 3rd press of S1 enters the setting of date. Use S2 and S3 again to set the date of your target day. Then press S1 again to return to the display mode C.

**AFTER TARGET DAY** - After the Target reaches "0", the display will show "E E E E" to imply you the Target Mode is closed.

**HOW TO REPLACE BATTERY** - Remove the back cover. Lift the tab holding the battery in place and remove the battery. Place the new battery positive (+) side up. The LCD full displayed for 3 seconds and then changed to 12:00. Apply the above method to adjust current calendar and time. If your target day is different from January 1, 2000, then set your Target Day as per above method too.