

# INSTRUCTION MANUAL OF CREDIT CARD TYPE ADJUSTABLE DAY COUNTDOWN TIMER

## MODEL NO. CT200-DD

CT200-DD

This is an adjustable day countdown and count up timer. Please read the following steps to operate the unit.

### Mean Features

- ✓ Capacity – 9999 days
- ✓ Resolution – 1 second after countdown to 100 minutes
- ✓ Endless Alerts – Both piezo buzzer beeping, and LCD blinking
- ✓ Display format automatically switched to proper manner
- ✓ Count up after countdown
- ✓ Chronometer

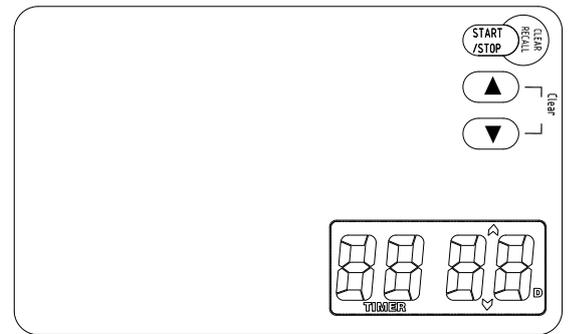


Fig. a

### Keys

1. S1 (START/STOP/CLEAR/RECALL) – Press to start or stop counting. After set interval expired, the 1<sup>st</sup> press to stop, 2<sup>nd</sup> press to clear reading, 3<sup>rd</sup> press to recall previous setting, and 4<sup>th</sup> press to start new cycle counting down.
2. S2 (▲) – Press to adjust reading upward
3. S3 (▼) – Press to adjust reading downward
4. S2 + S3 – At counting up mode, press S1 to stop reading, then press S2 and S3 together simultaneously to erase reading to zero

### How to Adjust Time Interval

Press "▲" or "▼" key to adjust the days. Press and hold for quick advance.

### Start/Stop the Timer

Press S1 key to start the timer counting down. Press again to stop the timer.

### Recall of Previous Setting

When set time is up, the 1<sup>st</sup> press of S1 key is to stop counting, beeping, and display blinking. Press again to clear display reading to zero, the 3<sup>rd</sup> press to recall the previous setting, and the 4<sup>th</sup> press to restart new cycle countdown.

### How the Display Switches to Proper Format Automatically

Please refer to Fig. b. It shows you how the display format switches at each counting stage.

### What Happen When Countdown Expired

1. Endless audible alert – Beep for six times, then wait for 10 seconds and repeat beep again.
2. Endless visual alert – Along with counting up, full LCD screen blinking.
3. Both of the above two alerts always keep active, never stop.
4. Press S1 to stop the above audible and visual alerts.
5. Press S1 again to clear the reading.
6. Press S1 again to recall to the previous setting
7. Press S2 again to start new cycle of countdown

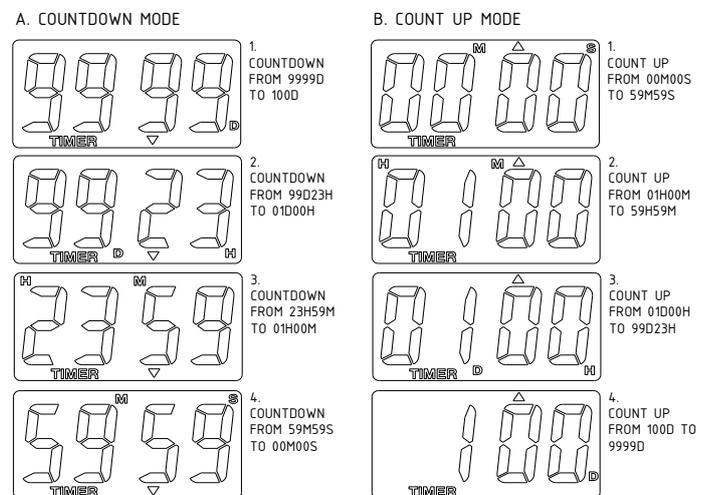


Fig. b

### How to use Chronometer Mode

Make sure the timer is stopped counting. Press S2 and S3 simultaneously to erase the screen reading. Press S1 to start chronometer. Press again to stop.

### How to Replace Battery

Remove the battery cover. Take off the exhausted battery. Place a fresh one with positive (+) symbol upward. As well as the timer beeps three times, full LCD displayed, and then turn to normal. Restore battery cover.

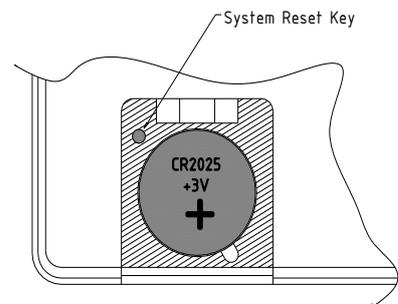


Fig. c

### How to System Reset the Timer

Please refer to the Fig. c. The drawing indicates the position of Reset key. Apply a fine point tool like paper clip, to press the key hidden under battery cover at rear side to system rest the timer. As well as the timer beeps three times, full LCD displayed, and then turn to normal. Restore battery cover.

### Battery Type Required

1 pc of CR2025 lithium battery or equivalent