
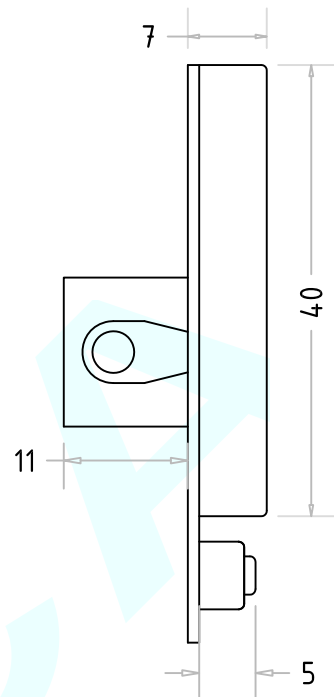


# Operational Manual of 50C(E)-1AXG Series

## 50C-1AXG-Z (50X-1X0) 3 Keys

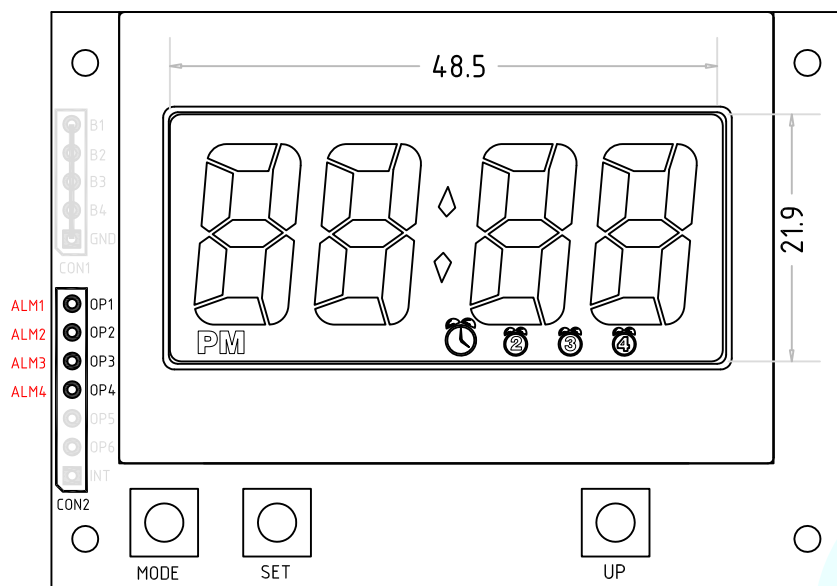

### A. The Symbols

- 🕒 - Symbol of the 1st Alarm      🕒 - Symbol of the 3rd Alarm  
🕒 - Symbol of the 2nd Alarm      🕒 - Symbol of the 4th Alarm

### B. The Keys

MODE - press to enter each alarm or real time.

SET - Press to enter each setting mode of real time or each alarm time.

UP - Press to adjust hour or minute of real time and each alarm time. It is also used to set each alarm time "ON" or "OFF".

### C. How to Set Real Time

Full screen is displayed for 3 seconds when power on, then return to 0:00.

Press "SET" key to enter setting mode of hour. The "HOUR" will be blanking. Use "UP" key to adjust hour. Press "SET" key again to enter setting mode of minute. The "MUNITE" will be blanking. Use "UP" key again to adjust minute.

Press "SET" key again to return to normal display.

### D. How to Set Each Alarm Time

At real time mode press "Mode" key to enter each alarm mode. The related alarm symbol appears with flashing. Press "SET" to enter setting mode of hour. Use "UP" key to adjust hour. Press "SET" again to enter setting mode of minute. Use "UP" key again to adjust minute. Press "SET" key to complete setting of alarm time. Make sure the related alarm symbol is flashing or not. The symbol flashing means the related alarm time is not set "ON" yet. Press "UP" key to set the alarm "ON", then the symbol displays steady. Press "mode" key again to return to real time.

### E. How to Set Alarm "ON" or "OFF"

At real time mode, if alarm symbol appears steady, means the related alarm time is set "ON". Use "MODE" key to enter the related alarm mode, then press "UP" key. The symbol become blinking, means the alarm is at "OFF" status.

If the symbol does not appear, means the related alarm is not set "ON". Use "MODE" key to enter the related alarm mode. The related symbol should be in blinking. Press "UP" key to set the alarm "ON". At the same time the symbol appears steady.