


INSTRUCTION MANUAL

Model No. TR810MS

Main Features

- Maximum Capacity: 99 minutes 59 seconds
- Rapid Key: Press and hold "M" or "S" keys for 3 seconds to adjust upward the setting quickly
- When time up, full LCD blinking endlessly, unless the "Stop" key is depressed
- Adhesive backing sticks to almost any surface
- Type of Aural Alert: Piezo buzzer

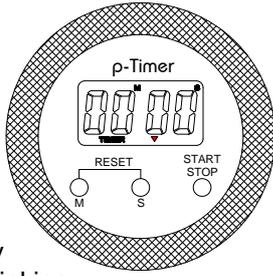

The Keys

S1 – "Start/stop", to start, stop, and recall
S2 – "M", to adjust minute
S3 – "S", to adjust second
RESET – Press S2 and S3 together to reset the reading to zero



How to Operate the Timer

- Press S2 and S3 to adjust the minute and second.
- Press S1 to start countdown the timer
- Press S1 again to stop countdown temporary
- Press S1 again to continue countdown
- When counting expired, the aural alert go off; press S1 to stop the alarm
- Press S1 again to recall the previous setting
- Press S1 again to start countdown for next cycle

How to Replace Battery

This timer is powered with a piece of LR44 or equivalent. Please follow the steps below to replace battery:

1. Use a proper size of "-" screw driver to insert to the position of the arrow shown on Fig. a, and open the back cover.
2. Use the same screw driver to push battery out of the metal holder as the drawing shown below.
3. Discard the old battery.

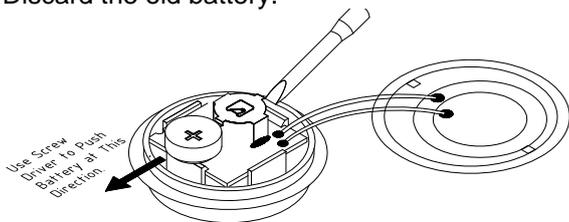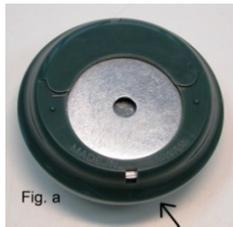


4. Insert a fresh battery (positive side up) into the metal holder.
5. At the meantime, full LCD blinking and alarm goes off for 3 seconds, then display 00^M00^S.
6. Restore the back cover. Be sure the mark "Made in Taiwan" is at the lower position.

INSTRUCTION MANUAL

Model No. TR810MS

Main Features

- Maximum Capacity: 99 minutes 59 seconds
- Rapid Key: Press and hold "M" or "S" keys for 3 seconds to adjust upward the setting quickly
- When time up, full LCD blinking endlessly, unless the "Stop" key is depressed
- Adhesive backing sticks to almost any surface
- Type of Aural Alert: Piezo buzzer

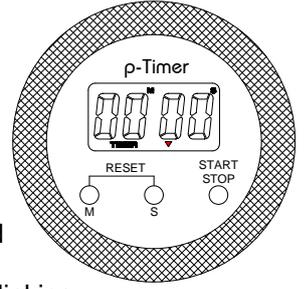

The Keys

S1 – "Start/stop", to start, stop, and recall
S2 – "M", to adjust minute
S3 – "S", to adjust second
RESET – Press S2 and S3 together to reset the reading to zero



How to Operate the Timer

- Press S2 and S3 to adjust the minute and second
- Press S1 to start countdown the timer
- Press S1 again to stop countdown temporary
- Press S1 again to continue countdown
- When counting expired, the aural alert go off; press S1 to stop the alarm
- Press S1 again to recall the previous setting
- Press S1 again to start countdown for next cycle

How to Replace Battery

This timer is powered with a piece of LR44 or equivalent. Please follow the steps below to replace battery:

1. Use a proper size of "-" screw driver to insert to the position of the arrow shown on Fig. a, and open the back cover.
2. Use the same screw driver to push battery out of the metal holder as the drawing shown below.
3. Discard the old battery.

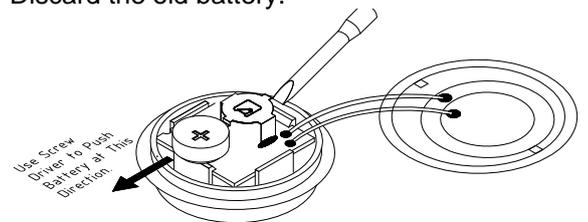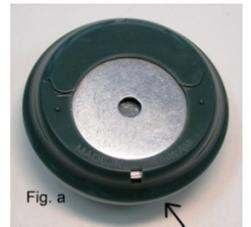

4. Insert a fresh battery (positive side up) into the metal holder.
5. At the meantime, full LCD blinking and alarm goes off for 3 seconds, then display 00^M00^S.
6. Restore the back cover. Be sure the mark "Made in Taiwan" is at the lower position.