INSTRUCTION MANUAL

Model No. TR810HM

Main Features

- Maximum Capacity: 99 hours 59 minutes
- Rapid Key: Press and hold "H" or "M" keys for 3 seconds to adjust upward the setting quickly
- When time up, full LCD blinking endlessly, unless the "Stop" key is depressed
- Adhesive backing sticks to almost any surface
- Type of Audible Alert: Piezo buzzer

The Keys

S1 - "H", to adjust hour

S2 - "M", to adjust minute

S3 - "Start/stop", to start, stop, and recall

 
RESET - Press S1 and S2 together to reset the reading to zero

How to Operate the Timer

- Press S1 and S2 to adjust the hour and minute.
- Press S3 to start countdown the timer
- Press S3 again to stop countdown temporary
- Press S3 again to continue countdown
- When counting expired, the aural alert go off; press S1 to stop the alarm
- Press S3 again to recall the previous setting
- Press S3 again to start countdown for next cycle


How to Replace Battery

This timer is powered with a piece of LR44 or equivalent. Please follow the steps below to replace battery:





 - Use the same screw driver to push battery out of the metal holder as the drawing shown below.
- Discard the old battery.




- Insert a fresh battery (positive side up) into the metal holder.
- At the meantime, full LCD blinking and alarm goes off for 3 seconds, then display $^{\rm H}00^{\rm M}00$.
- Restore the back cover. Be sure the mark "Made in Taiwan" is at the lower position.

INSTRUCTION MANUAL

Model No. TR810HM

Main Features

 - Maximum Capacity: 99 hours 59 minutes
- Rapid Kev: Press and hold "H" or "M" keys for 3 seconds to adjust upward the setting quickly



- Adhesive backing sticks to almost any surface

- Type of Audible Alert: Piezo buzzer

The Keys

S1 – "H", to adjust hour

S2 - "M", to adjust minute

S3 - "Start/stop", to start, stop, and recall

RESET - Press S1 and S2 together to reset the reading to zero


How to Operate the Timer

- Press S1 and S2 to adjust the hour and minute.
- Press S3 to start countdown the timer
- Press S3 again to stop countdown temporary
- Press S3 again to continue countdown
- When counting expired, the aural alert go off; press S3 to stop the alarm
- Press S3 again to recall the previous setting
- Press S3 again to start countdown for next cycle


How to Replace Battery

This timer is powered with a piece of LR44 or equivalent. Please follow the steps below to replace battery:

Use a proper size of "-" screw driver to insert to the position of the arrow shown on Fig. a, and open the back cover.

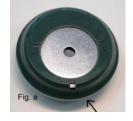

 - Use the same screw driver to push battery out of 2. the metal holder as the drawing shown below.
- Discard the old battery. 3.



- Insert a fresh battery (positive side up) into the 4. metal holder.
- At the meantime, full LCD blinking and alarm goes 5. off for 3 seconds, then display $^{\rm H}00^{\rm M}00$.
- Restore the back cover. Be sure the mark "Made 6. in Taiwan" is at the lower position.

Printed in Taiwan