


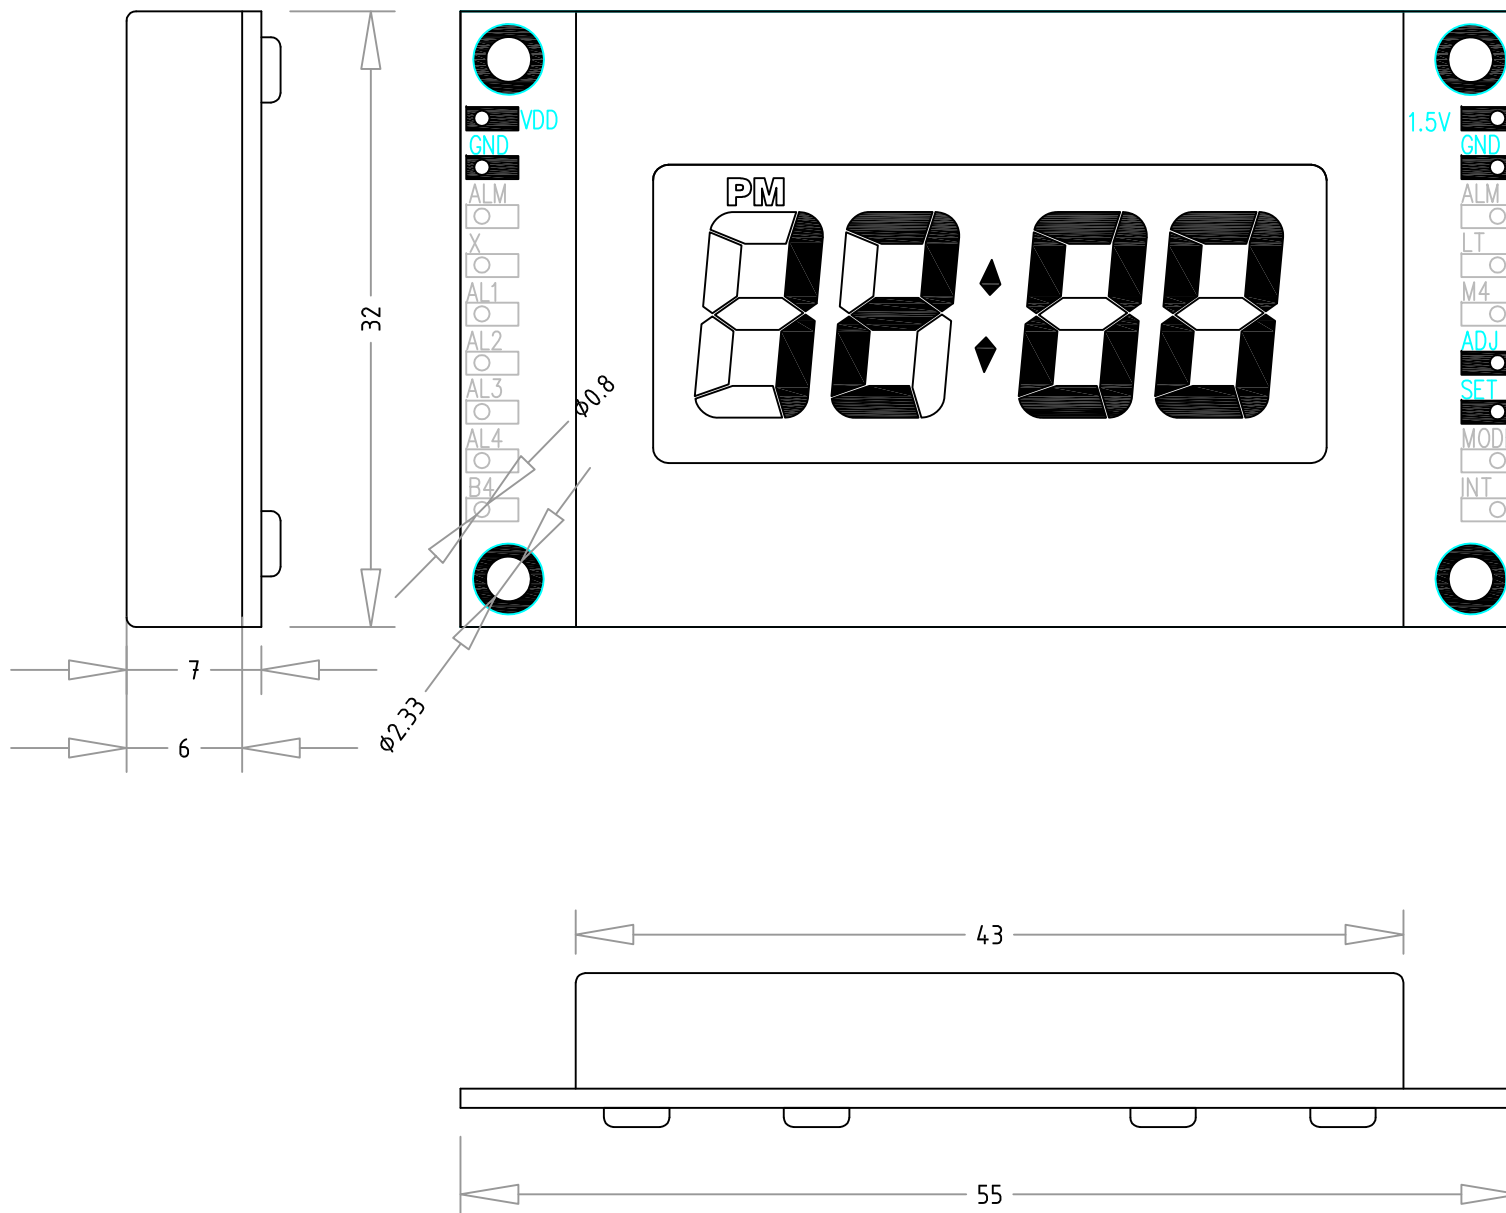

4XC-A0J Clock Module (Hour-Minute)

Pin Definition

1. VDD/1.5V: 1.5V positive power pole
2. GND: negative power pole
3. SET: for realtime set
4. ADJ: for realtime adjustment

Key Operation

1. connect power poles, 1.5V(VDD) and GND
2. LCD screen full displayed for 10 seconds then display 12:00.
3. connect VDD to "SET" to enter hour setting mode. The lefthand two digits keep blinking.
4. connect VDD to "ADJ" to advance the hour
5. connect VDD to "SET" again to enter minute setting mode. The righthand two digits keep blinking.
6. connect VDD to "ADJ" to advance minute.
7. To complete the setting connect VDD to "SET" again to return to normal realtime mode.

scale: mm

By vosca
4/29/2016